

INSTALLATION INSTRUCTIONS | CRS5 Ceiling Canopy: CRS5-QRCD1 and CRS5-QRCD2

Note: Before attempting installation please refer to your local electrical code.


IMPORTANT SAFETY INSTRUCTIONS

- Read all the instructions before installation. Save instructions for later use.
- Turn off power at fuse or circuit breaker box before installation of before doing any maintenance work.
- Wear rubber soled shoes and work should be done on a sturdy wooden or non-conductive ladder.
- Product must be mounted in locations and at heights in a manner consistent with its intended use and in compliance with National Electrical Code and local building codes. For indoor use only.
- Product must be grounded to avoid potential electric shock and any other potential hazards.
- Do not exceed the nominal supply voltage or amperage ratings.
- Make sure all screws are properly tightened.
- Do not install any lamp holder closer than 6-inches from any curtain or similar combustible material.
- Use only fixtures and fittings intended for use with ConTech Decorative Stemlight Pendant systems.
- Installing contrary to instructions may cause unsafe conditions.
- **WARNING:** Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C. Consult a qualified electrician before installation.
- **WARNING:** Risk of burns. Lamps are extremely hot when lit. Allow lamps to cool down in temperature before handling.
- To avoid hazards to children, account for all parts and properly dispose of all packing materials.
- Call the Technical Support department at ConTech Lighting with any installation questions: 847-559-5500.

INSTALLATION |

1. Install Mounting Plate/Driver Assembly to Junction Box in ceiling using Mounting Screws.
3. Connect the Primary Leads from the Junction Box to the Primary Leads of the LED Driver (Black/Brown to Black, White/Blue to White) on the LED Driver supply side. Connect the Green wire to the Ground wire
4. For Canopy with 0-10V Dimming, the Driver can be dimmed with 0-10V Dimming Controls. Locate Low Voltage Dimming Control wires (Purple and Pink/Grey) and make appropriate connections (Purple to Purple, Pink/Grey to Pink/Grey). For Non-Dimming applications, cap off the Low Voltage Control Wires.
4. Carefully tuck excess wires and connectors in Junction Box. Position the Canopy in place by aligning the two side screws on the mounting bracket to the slots on the sides of the canopy, twist and lock canopy in place, secure and tighten two (2) screws on side of canopy.
5. The CRS5 Pendant can now be installed by inserting the Quick Disconnect plug from Pendant to Canopy, twist knurled ring to tighten and secure.

For additional pendant installation details, refer to the CRS5 LED Pendant installation instructions.

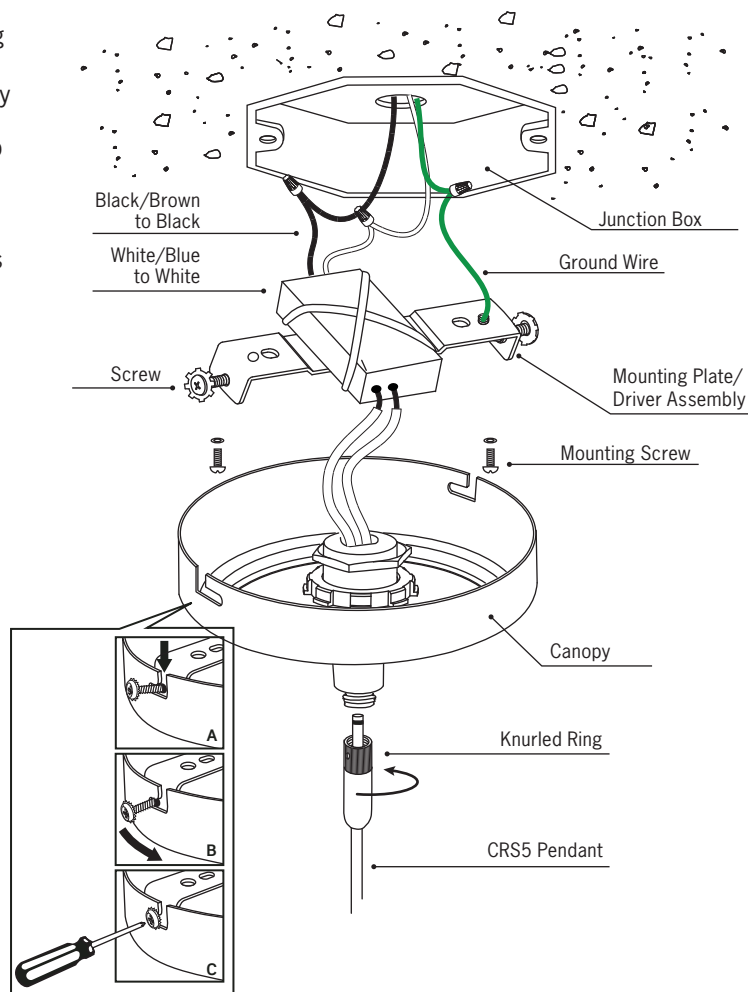

All specifications subject to change without notice. For ConTech's limited product warranty, go to www.contechlighting.com. For a printed copy of the warranty, call 1-847-559-5500.

CONTECH LIGHTING | 725 LANDWEHR ROAD | NORTHBROOK, ILLINOIS 60062 | PHONE 847.559.5500 | www.contechlighting.com

©2022 Conservation Technology of Illinois, LLC. All rights reserved. Note: Specifications subject to change without notice.

CRS5DQRCDINST REV0222