

INSTALLATION INSTRUCTIONS

For ConTech Lighting Stealth LED Recessed Wall Lighter Series: R6WRM

INSTALLATION PROCEDURES

- · Housing can NOT be installed in direct contact with insulation. Do not install insulation within 3" of fixture sides or wiring compartment, nor above fixture in such a manner to entrap heat. (Figure 1)
- Scribe rectangle measuring 4-5/8" x 7-1/4" on ceiling in desired location/orientation and accurately cut hole in ceiling.
- Make all necessary electrical connections (See "Electrical Connection").
- With clips seated properly in can (Figure 2), insert housing through ceiling opening, junction box first, until it is flush with ceiling.
- Hold fixture up against ceiling and push clip through housing slot.
- To lock clip into place, push flat portion against side of frame in an upward direction. (Figure 3A) To complete installation, push up clip with screwdriver until it snaps into place. To release, pull down on clip. (Figure 3B)

ELECTRICAL CONNECTION:

- Provide electrical service with flexible cable only. Pass cable through ceiling opening and wire fixture in accordance with NEC or local electrical code.
- Remove the junction box cover.
- Follow the proper wiring diagram for the electrical/dimming option (PAGE 2). Ensure wiring is the correct voltage for the fixture - either 120V or 277V.
- Wiring Diagram 1: 12D, 27D, 12D6, 27D6, 12D8, 27D8 (Triac, ELV or 0-10V). Note: When dimming with 0-10V, Class 1 wiring (300V wiring inside conduit) is required. Please consult factory for additional details.
- Wiring Diagram 2: 12D3 (Lutron HiLume)
- Wiring Diagram 3: 12D4, 27D4 (Lutron EcoSystem) Wiring Diagram 4: 12D7, 27D7, 12D9, 27D9 (DALI)
- Wiring Diagram 5: 12DMX, 27DMX, MVDMX (DMX)
- Close junction box cover after wiring. Ensure all wires are safely within junction box before closing.

PULL DOWN TRIM/LED MODULE INSTALLATION:

- Attach harness from housing to harness from trim using quick-connect. (Figure 4)
- Trim features graduations to ensure consistent alignment from fixture to fixture. The constant tension mechanism will hold the trim securely in desired position. For unintended aiming, the trim can be locked in place with the supplied allen
- wrench. (Figure 5) • Squeeze the torsion springs together on the trim and insert them into the torsion brackets inside the housing. The torsion springs will securely seat the trim against the ceiling.


REPLACEMENT OF LED DRIVER:

- NOTE: LED Driver should be replaced by a qualified electrician. Turn off power at fuse or circuit breaker box before replacing the LED Driver.
- Pull and drop the trim/LED Module from the frame.
- Disconnect the electrical connection. (Figure 4)
- Complete housing can be removed from ceiling by reversing installation procedure. Or, remodel plate screws can be removed so J-Box/Driver assembly can be pulled through fixture aperture. (Figure 2)
- Remove the J-Box cover with LED Driver attached to it by releasing retention spring on side of J-Box.
- Disconnect LED Driver from line voltage input wiring in J-Box. Disconnect the LED Driver from the LED leads (leads are terminated by crimp connectors).
- Reinstall Factory Approved LED Driver by reversing above procedure.

IMPORTANT SAFETY INSTRUCTIONS:

- Read all the instructions before installation. Save instructions for later use.
- Turn off power at fuse or circuit breaker box before installation or before doing any maintenance work.
- Product must be grounded to avoid potential electric shock and any other potential hazards. · Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with National Electrical Code and local codes. Use of
- accessory equipment is not recommended. • Installing contrary to instructions may cause unsafe conditions.
- . Do not block light from the trim aperture, in whole or in part, as this may cause unsafe conditions.
- Warning: Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C. Consult a qualified electrician before installation.
- Avoid hazards to children: account for all parts and properly dispose of all packing materials.
- · Call the Technical Support department at ConTech Lighting with any installation questions: 847.559.5500.

Energy Star products are covered for three (3) years by a full replacement guarantee after date of installation. In addition, ConTech LED products carry a five (5) year limited warranty from date of purchase.

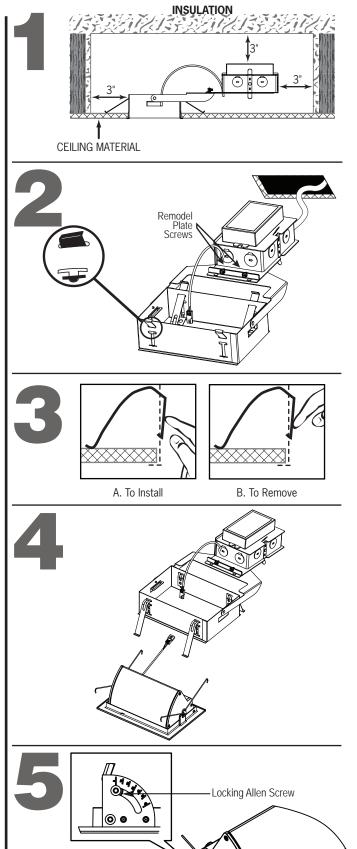


All specifications subject to change without notice. For ConTech's limited product warranty, go to www.contechlighting.com. For a printed copy of the warranty, call 1-847-559-5500.




INSTALLATION INSTRUCTIONS


For ConTech Lighting Stealth LED Recessed Wall Lighter Series: R6WRM

WIRING DIAGRAMS

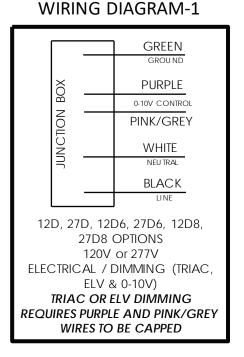


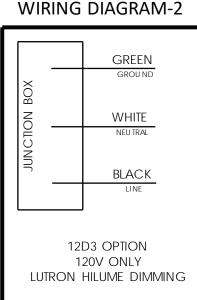


WIRING DIAGRAM-3

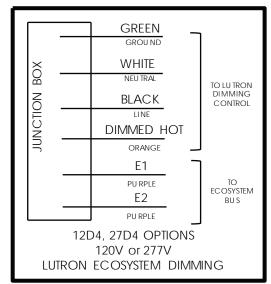

WIRING DIAGRAM-4

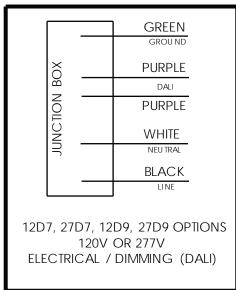

WIRING DIAGRAM-5

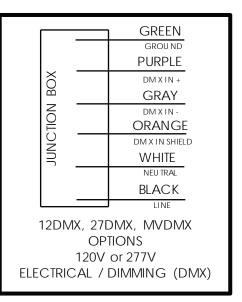

All specifications subject to change without notice. For ConTech's limited product warranty, go to www.contechlighting.com. For a printed copy of the warranty, call 1-847-559-5500.



INSTALLATION INSTRUCTIONS


For ConTech Lighting Recessed Stealth LED Series Accessory: FA-19

INSTALLATION INSTRUCTIONS

- 1. Insert LF49 lens, FA-54 louver, or FA-53 snoot into FA-19 accessory holder by placing edge of media under retaining clip as shown (FIG 1). Using two fingers on the bottom side of the accessory holder, depress opposite retaining clip inward and place lens in final position as shown (FIG 2). When inserting 2 pieces of media, install these stacked simultaneously.
- Assemble FA-19 accessory holder to Stealth LED fixture by placing one side into position as shown (FIG 3) and pushing the other side of FA-19 into position until accessory holder retaining springs are securely engaged with the bezel.

IMPORTANT SAFETY INSTRUCTIONS:

- Read all the instructions before installation. Save instructions for later use.
 Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power
- off sing the light switch is not sufficient to prevent electrical shock.Product must be grounded to avoid potential electric shock and any other
- potential hazards.
 Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with National Electrical Code and local codes. Use of accessory equipment is not recommended.
- Installing contrary to instructions may cause unsafe conditions.
- Do not block light from the trim aperture, in whole or in part, as this may cause unsafe conditions. Do not mount near gas or electric heaters.
- Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or in eyes, flush with fresh water and contact a physician immediately.
- Equipment should be mounted in location and at heights where it will not readily be subject to tampering by unauthorized personnel.
- **Warning:** Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C. Supply conductors (power wires) connecting the fixture must be rated at minimum of 90°C. Consult a qualified electrician before installation.
- To avoid hazards to children, account for all parts and properly dispose of all packing materials.
- Call the Technical Support department at ConTech Lighting with any installation questions: 847.559.5500.

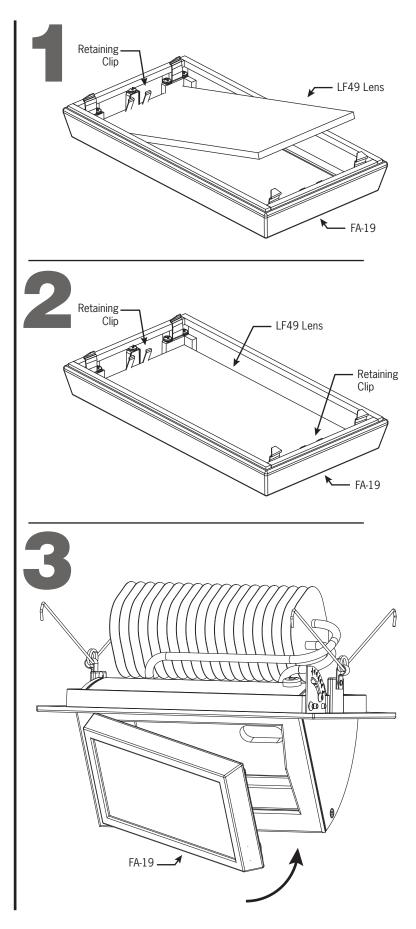

All specifications subject to change without notice. For ConTech's limited product warranty, go to www.contechlighting.com. For a printed copy of the warranty, call 1-847-559-5500.

This document can be recycled.